

TROVIS 5600 Automation System Web Module and Web Application TROVIS MOBILE



Accessories for TROVIS 5610 Heating and District Heating
Controller



Mounting and Operating Instructions

EB 5610-1 EN

Firmware version 1.00
Edition October 2012



1	General	3
2	Web module	4
2.1	Installing the web module	4
2.2	Connecting the web module to a local network	4
2.3	Determining the IP address of the web module	5
3	TROVIS MOBILE web application.....	6
3.1	Opening TROVIS MOBILE.....	6
3.2	Configuring TROVIS MOBILE and the network settings	7
3.2.1	Language	7
3.2.2	User name and password	8
3.2.3	System description	8
3.2.4	Network.....	9
3.3	Operating TROVIS MOBILE	10
4	Appendix.....	13
4.1	FTP access	13
4.2	Telnet access	13
4.3	General Public License (GPL).....	13
4.4	GPLv2 text.....	13

Definitions of the signal words used in these instructions

**NOTICE**

indicates a property damage message.

**Note:**

Supplementary explanations, information and tips

1 General

The web module allows relevant data, such as temperatures, pump states and valve positions of the TROVIS 5610 Heating and District Heating Controller, to be viewed on a computer or smartphone using the **TROVIS MOBILE** web application. Furthermore, set points and times-of-use can be changed.

Requirements:

- Web module (order no. 1402-0322)
- Standard Ethernet patch cable (not included in the scope of delivery)
- Permanent Internet connection of the TROVIS 5610 Heating and District Heating Controller over a switch/hub (an unlimited Internet flat rate is recommended)



Note:

The web module is optimized for the use of Mozilla Firefox (version 14.0.1 and higher). Windows® Internet Explorer® in version 9 and higher can be used.

2 Web module



Note:

The TROVIS 5610 Heating and District Heating Controller has a slot on the left-hand side to retrofit the web module or other interface boards for communication. Therefore, the web module cannot be run together with other interface boards.

2.1 Installing the web module

- ➔ Remove the dummy module on the left-hand side of the TROVIS 5610 Heating and District Heating Controller.
- ➔ Insert the web module.



Fig. 1: Inserting the web module into the TROVIS 5610 Heating and District Heating Controller

2.2 Connecting the web module to a local network

The web module can be connected to a local network (10/100 MBit) using a standard Ethernet patch cable to a switch/hub or directly to the Ethernet port of a PC.

2.3 Determining the IP address of the web module

After connecting the web module to the local network, an IP address is automatically assigned to the activated TROVIS 5610 Heating and District Heating Controller. This address depends on the local network.



NOTICE

Only connect one web module to the local network with its default settings (delivered state). If several web modules with default settings are connected, the determined IP address cannot clearly allocated to a module.



Note:

- The IP address is assigned by a DHCP server of the local network. If the DHCP server is not available, e.g. because the web module is connected to the Ethernet port of a PC, use 192.168.56.10 as the IP address.
- To access the web module, the PC or smartphone and the web module must be in the same subnet.

The IP address automatically assigned by the DHCP server can be read in the Information menu of the TROVIS 5610 Heating and District Heating Controller:

- IP (IP address)
- NM (subnet mask)

Information		5/5
Device		
System	2.1.0	
Firmware	1.00	
Serial number	000000	
IP	172.XX.XX.XXX	
NM	255.XXX.X.X	
<div style="display: flex; justify-content: space-around;"> ← BACK NEXT → ← HOME </div>		



Note:

If the IP address is not displayed in the TROVIS 5610 Heating and District Heating Controller, e.g. because the controller has a firmware version lower than 1.04, it can be determined using the Microsoft Windows command prompt on the computer. The command in this case is **ping 5610_DIST_HEAT**.

3 TROVIS MOBILE web application

The TROVIS MOBILE web application is used to view data and to change settings of the TROVIS 5610 Heating and District Heating Controller with installed web module.

3.1 Opening TROVIS MOBILE

- Open the web browser.
- Enter the IP address of the web module (see section 2.3) into the address bar of the web browser and press ENTER.

TROVIS MOBILE opens.



NOTICE

It may take a few seconds for TROVIS MOBILE to load. The web browser loads the entire settings of the TROVIS 5610 Heating and District Heating Controller in the background. You must wait for the loading process to finish before you log in to TROVIS MOBILE.

- Open login window by pressing *Login*.

- Enter user name and password.





Note:

Enter 5610 for the user name and password on starting TROVIS MOBILE for the first time.

- Confirm by pressing *Log in*.

The start page of TROVIS MOBILE opens.

After starting up the web module for the first time, the user name and password should be changed to prevent unauthorized access to the TROVIS 5610 Heating and District Heating Controller. Refer to section 3.2.2.

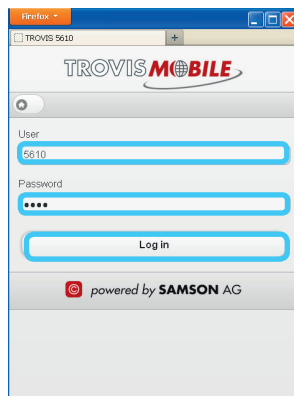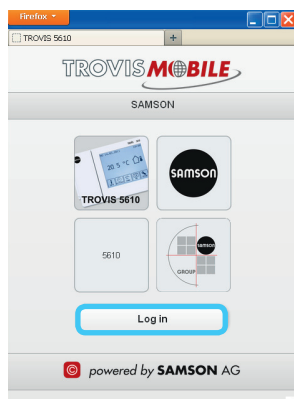




3.2 Configuring TROVIS MOBILE and the network settings

This section describes how to:

- Change the language settings for TROVIS MOBILE
- Change the user name and password for TROVIS MOBILE
- Add a system description to TROVIS MOBILE
- Change the network settings of the web module

TROVIS MOBILE is configured in *Mobile configuration* menu.

- Open *Mobile configuration* by pressing .
- Perform required settings as described in sections 3.2.1 to 3.2.4.
- Exit *Mobile configuration* by pressing .

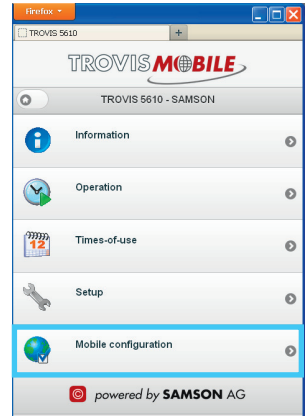



3.2.1 Language



Note:

The language setting only applies to TROVIS MOBILE. The language setting of TROVIS 5610 Heating and District Heating Controller must be changed at the controller itself.

- Press  to open *Language* menu item
- Select required language.

The active language setting is marked by .


The following message box appears:

To enable the change to all websites you have to reload the page.

- Click on link in the box.

TROVIS MOBILE returns to the login window.

The language setting in TROVIS MOBILE has been changed.

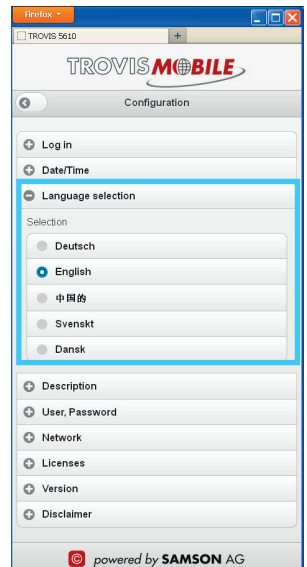

3.2.2 User name and password


- Press **+** to open *User, Password* menu item.
- Enter new user name.
- Enter new password.
- Press **✓** to save.

The new user name and password are confirmed with the message *Configuration saved*.



Note:


The user name and password can be reset to their default settings at the TROVIS 5610 Heating Controller in firmware version 1.10 and higher by setting the PA6-10 parameter.

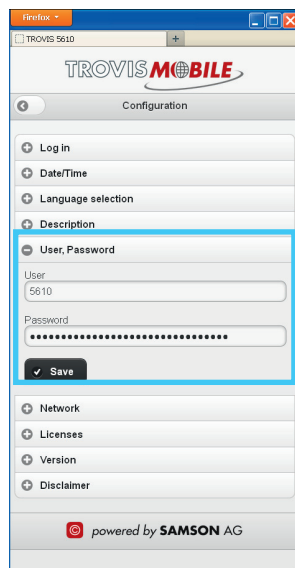

3.2.3 System description

The system description is made up of the system name and description. Both entries are displayed on opening TROVIS MOBILE.

- System name: Located below the TROVIS MOBILE logo (in this case: System An1 1.6.2)
- Description: In left-hand bottom square (in this case: DHW storage tank system)

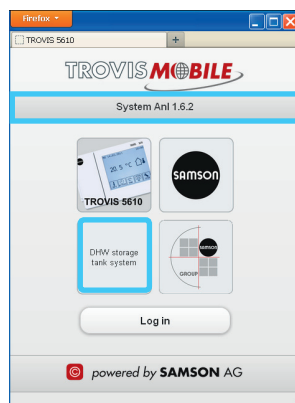

→ Press **+** to open *Description* menu item.


→ Enter system name.

→ Enter description.

Use the HTML command `
` to add a line break.

→ Press **✓** to save.

The new system description is confirmed with the message *Configuration saved*.

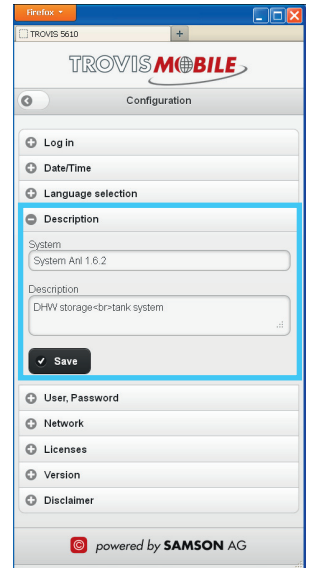

3.2.4 Network


→ Press **+** to open *Network* menu item.

→ Deactivate () or activate () DHCP server as required.

→ Enter details for host, IP address, subnet mask, gateway, DNS and time server as required.

→ Press **✓** to save.

The new network settings are confirmed with the message *Configuration saved*.

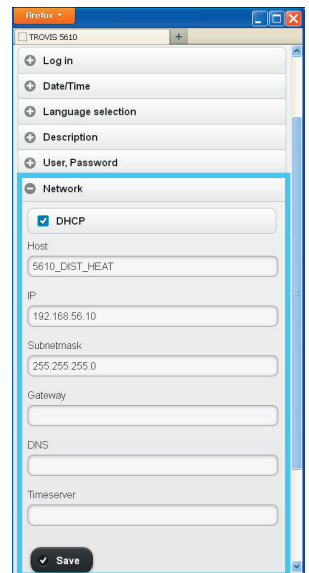

Note:

The screenshot shows the default settings.

3.3 Operating TROVIS MOBILE



Note:

Settings that have been changed at the controller are first displayed after restarting TROVIS MOBILE.

- Open the web browser.
- Enter the IP address of the web module (see section 2.3) in the address bar of the web browser and press ENTER.

TROVIS MOBILE opens.





NOTICE

It may take a few seconds for TROVIS MOBILE to load. The web browser loads the entire settings of the TROVIS 5610 Heating and District Heating Controller in the background. You must wait for the loading process to finish before you log in to TROVIS MOBILE.



- Open login window by pressing *Login*.

- Enter user name and password.
- Confirm by pressing *Login*.

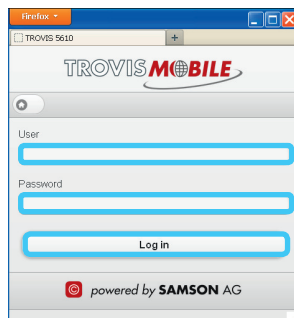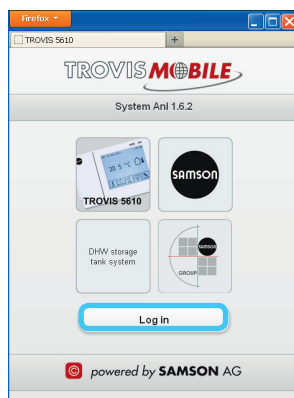

The start page of TROVIS MOBILE opens.

The menus displayed on the start page are the same as the menus used on the TROVIS 5610 Heating and District Heating Controller.

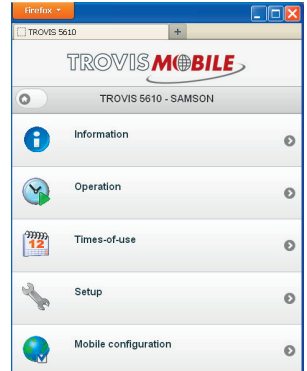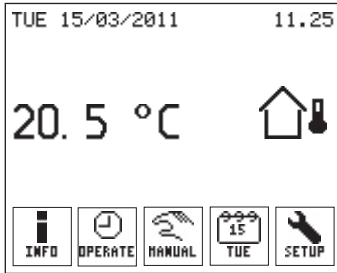

<i>Information menu</i>	→ Allows you to view information on the control operation (temperatures, operating mode, valve position, pump state) and on the controller
<i>Operation menu</i>	→ Allows you to set the operating mode and define special times-of-use
<i>Manual menu</i>	This menu is not activated in TROVIS MOBILE.
<i>Times-of-use menu</i>	→ Allows you to define times-of-use
<i>Setup menu</i>	→ Allows you to change set points and deactivation values
<i>Mobile configuration menu</i>	<p>→ Allows you to set the controller time</p> <p>→ Allows you to configure TROVIS MOBILE and the network settings. Refer to section 3.2.</p> <p>This menu is only available in TROVIS MOBILE.</p>



Note:

You can find more details on the menus in the mounting and operating instructions of the heating controller

▶ EB 5610 EN.

General commands



Return to login window



Go to previous page



Refresh



Open menu/submenu



Select setting (setting is automatically adopted without the need for saving)



Save setting



Close submenu



Expand



Collapse

4 Appendix

4.1 FTP access

The web module uses an FTP server to update the website and the web module firmware. This server allows update files and websites to be downloaded using an FTP client or update tool and provides password-protected access to the internal file system of the web module.

The FTP server uses the default command port 21.

4.2 Telnet access

The web module uses a password-protected Telnet server for access to the command shell of the real-time operating system (RTOS).

The service runs on the default telnet port 23.

4.3 General Public License (GPL)

Some parts of the firmware use GPL-licensed open-source libraries and frameworks.

The source code is available on the SAMSON website.

4.4 GPLv2 text

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
59 Temple Place, Suite 330, Boston, MA 02111-1307 USA
Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to

using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is

covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients'

exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice. This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for

this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS



SAMSON AG · MESS- UND REGELTECHNIK
Weismüllerstraße 3 · 60314 Frankfurt am Main · Germany
Phone: +49 69 4009-0 · Fax: +49 69 4009-1507
Internet: <http://www.samson.de>

EB 5610-1 EN

2013-11-07